 


モード調節 ダイヤル 位置	対応アクチュ エーター	対応端子番号		各アクチュエーター端子の故障表示				
		アクチュ エーター 側	オート アンプ 側	表示灯 (LED) ◎：点灯 ○：点滅				表示パターン (2回分)
					A/C 			
	エアミックスドア	異常なし		◎		◎	◎	連続点灯
		3	17		○	○	○	
		4	20		○	○	○	
		1	19		○	○	○	
		6	18		○	○	○	
 	モードドア	異常なし		◎		◎	◎	連続点灯
		3	37	○	○	○		
		4	40	○	○	○		
		1	39	○	○	○		
		6	38	○	○	○		